REALTOR'S CHOICE BOX SIGN

INSTALLATION INSTRUCTIONS

Before beginning the setup please unpack your sign by cutting or removing the shrink wrap on all parts. You should have a Top Panel, Bottom Panel, Front Panel, Back Panel and 2 side panels per sign. Our kit comes in sets of 2.

Items Needed For Installation:

7' U-Channel Post 24" Long, 3" PVC Pipe 3" PVC Pipe Cap Tape Measure Devcon Weld It All Purpose Glue Permanent Marker Towel or Rag to wipe any access glue



Step 1: Start by flipping the back panel so that the graphics are not visible or facing down. You may want to place your panel on a soft towel or blanket to eliminate



scratching. Take the top panel and line up the tab system. Overlap the top panel over the edge of back panel then apply pressure to each tab section starting on one side working your way across.

Step 2: Repeat Step 1 by using the bottom panel and attach it to the bottom of the same back panel as step 1.



Step 3: Choose a side panel and attach using the same method by overlapping the side panel with the top panel and back panel. Apply pressure on the side panel to




pop each tab into place. NOTE: The side panels have a slot cut into them for an extra support tab that the top and bottom panels have on the ends. Please make sure that these extra support tabs are completely through the side panel slots.

Step 4: Repeat step 3 for the opposite side, side panel



installation.

have all the sides applied to the Realtor's Choice box sign except for the top panel. Before applying this panel, please apply a small bead of glue to all of the existing interior seams. We recommend using Devcon®

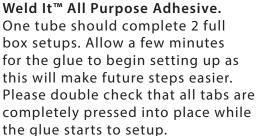



Step 6: Before applying the front panel, apply a small bead of glue to the corners and recessed tab groves of the top and side panels of the partially assembled box. Immediately place the front panel on top of the partially assembled box, applying pressure downward onto the front panel to pop the tabs into place. We recommend starting with a corner and going down one side working your way around the whole





Step 7: Your box should be completely assembled at this time. Please allow several hours

Step 5: You should now

for the glue to set into place. **Step 8:** After your glue is completely setup, the box is now ready to be mounted to an 7ft U-Channel Post. Please take a black sharpie and measure 24" up from the bottom of the U-channel post



and make a very visible black line. This is how far you want to drive your U-Channel Post into the ground. Using a Post Driver, drive your post 24" into the ground or until the black mark reaches the dirt surface of the ground.

Step 9: Slide your 24" long piece of 3" PVC pipe over the U-Channel and let it freely fall to the ground. This piece will help support the weight of the box sign and also cover up the U-Channel post.



Step 10: Place the bottom of the box sign over the U Channel post, then slide the Realtor's Choice box sign down the post until it rests on top of the 24" PVC pipe.

NOTE: The post should only stick out of the top 1-2" so that the top cap can be applied properly. If it is sticking out further causing the cap to not mount to the top panel, you will need to pull the sign off and drive





the post into the ground further until the cap can properly rest on the top panel.

Step 11: Use the 3" PVC Pipe Cap to cover the top of the U-channel post by mounting the cap to the printed shaded circle area on the top panel. You can choose to glue the cap onto the top panel or even velcro it, etc. This is mostly



for Aesthetics and also a bit of weight support for the sign itself. **NOTE: The more permanent the mount application for the cap, the harder it will be to insert the U-Channel post for re-use.**

The installation of your Realtor's Choice Box Sign is now complete.

If you like our product, please give us a review online at blueriverd.com.

Blue River Digital is a one-stop shop marketing company, and we would be glad to talk to you further about your signage needs or any other marketing needs you may have.







Scan for the Installation Video



Columbia City & Warsaw, Indiana

Phone: 260.248.2749
Website: blueriverd.com